

Installation Guide of Slide Clear Screen Within a Clearview 7000-3T Series Sliding Door

1. Measure and cut base-jamb mount (part D).

Install base jamb mount (part D) with anchor plates (part F, factory installed) on to fixed panel interlock (outside track) using #6-3/4" Tek screw (4) evenly spaced. (See fig. 1)

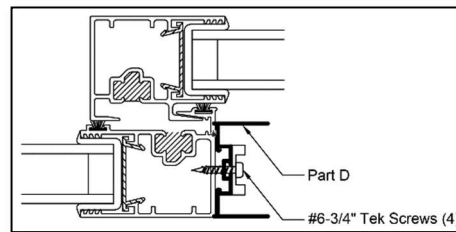


Figure 1

2. Measure and cut jamb profile with magnetic strip (part B).

Install jamb profile with magnetic strip (part B) on to door jamb channel using # 6-3/4" Tek screws (4) evenly spaced. (See fig. 2)

****THIS STEP IS OPTIONAL – MAY NOT BE REQUIRED DEPENDANT OF YOUR FRAME INSTALLATION****

3. Measure and cut bottom guide (part G).

Remove dust, dirt, debris from track; use of mineral spirits may be required. Measure distance from base-jamb mount (part D) to jamb mount (part B), cut bottom guide (part G) to length. Remove paper backer from bottom guide (part G), apply bottom guide (part G) to door sill outside track, press firmly in place. (See fig. 3)

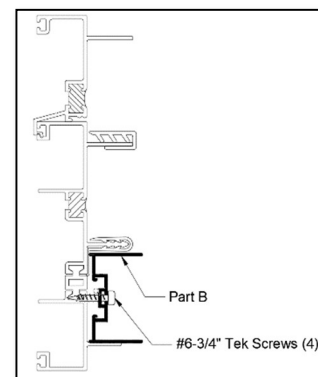


Figure 2

4. Determine orientation of screen cartridge.

The open back of cartridge towards door fixed panel – base jamb mount (Part D). Closed side of cartridge with magnetic strip towards door jamb – jamb profile with magnetic strip (part B).

4.1. Insert cartridge into door header outside track, lower cartridge firmly onto bottom guide (part G)

4.2. Push entire cartridge towards base jamb mount (part D) with even pressure along entire length of cartridge, push firmly onto anchor plates.

5. Install inside handle (part L) onto inside groove of pull bar (part C) at mid point of pull bar (remove paper backer).

5.1. Install outside handle (part H).

Insert handle knob (part H) at 90 degrees into groove slide up or down to desired height, rotate handle counterclockwise until it snaps into the plate.

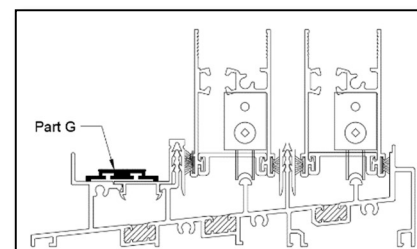


Figure 3

6. Extend screen cartridge so that pull bar (part C) engages into jamb.











If jamb mount with magnetic strip (part B) is used in door frame jamb, ensure pull bar (part C) engages into the jamb mount and magnets connect.

Repeat opening and closing of cartridge in track to ensure smooth operation.

7. See troubleshooting guides attached.

Visit www.clearview.on.ca; follow links to slide clear retractable screen instructions and Adjustments.

Parts List

Description	Drawing	Refence
Jamb Profile		B
Pull Bar		C
Base-Jamb Mount		D
Screen Cartridge		E
Anchor Plate		F
Bottom Guide		G
Outside Fixed Handle		H
Dual-Central Stop (Dual-Central Screen Systems)		J
#6 x 3/4" Pan Head		K
Inside Screen Handle		L

Screen Diagram

